


SCHEMA DE BRASSAGE ARMOIRE PME 22U

Règles de jarretière :

Le cheminement d'un cordon d'un module à un autre devra toujours passer par la zone de lovage à gauche. La gestion des surlongueurs s'effectuera en choisissant les bobines qui permettront de la résorber au mieux sans tension excessive. Une boucle est autorisée en partie basse si la surlongueur à stocker est trop importante.

La configuration des bobines peut-être changée pour s'adapter au mieux au besoin.

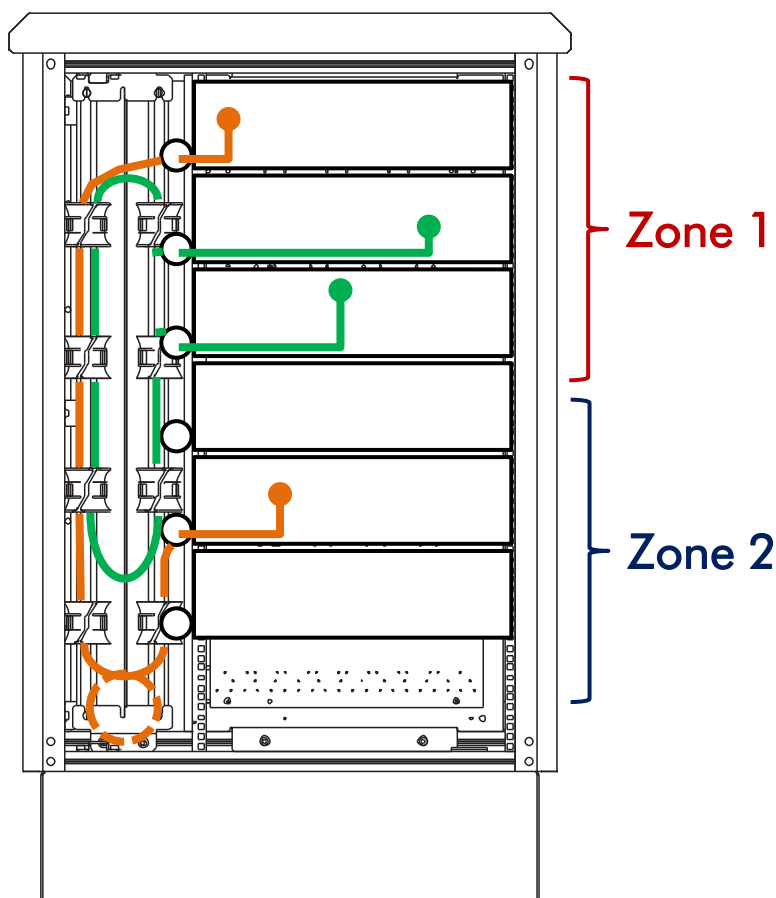


La longueur des cordons préconisée est de 2,5m
avec un diamètre maximum de 2mm.

PATCHING DRAWING FOR CABINET PME 22U

Patching instructions :

Routing a jumper between one module to another one must go through the coiling area on the left side. Management of overlengths is done by choosing the best drums to have good reduction without excessive tension. A loop is allowed if the overlength to coil is too important.

Configurations of drums could be adapted regarding the needs.

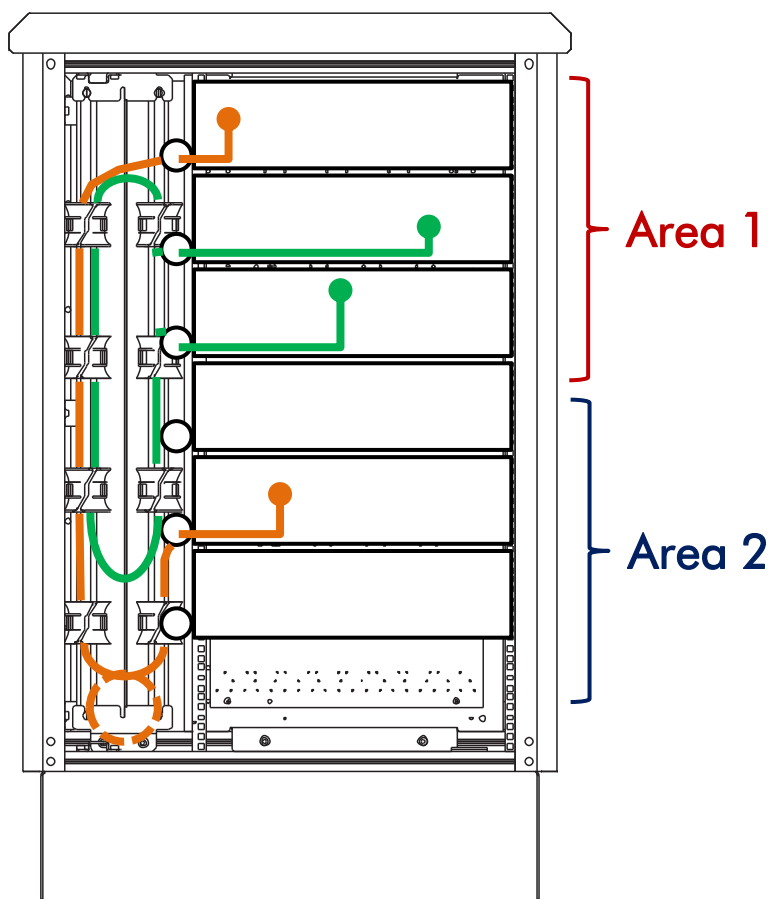

Recommended length of jumpers is 2,5m
With a maximum diameter of 2mm.